

 


# OPERATING INSTRUCTIONS

## ASTRO E2200 HOIST

PATENTS 419445, 4555091, 4611787  
OTHER PATENTS PENDING

MEETS OR EXCEEDS



**Manufactured by:**

**POWER CLIMBER**  
365 Upland Drive  
Seattle, WA 98188

**Phone: (800) 560-CLIMB (2546)**  
**Fax: (866) 470-8722**  
**Email: Sales@PowerClimber.com**  
**Website: PowerClimber.com**




## WARNING

- **All persons** operating this equipment must read and completely understand this manual.
- **All persons** must be thoroughly trained in the use of this equipment, its operational and safety features, and they must also be capable of carrying out the daily inspections.
- Only authorized persons shall operate this equipment.
- Any operation in violation of these instructions is at the **operator's own risk** and **may result in serious injuries**.
- Keep this manual with the hoist at all times.
- Use only spare parts and recommended steel wire rope from Power Climber.
- It is the responsibility of the user of this hoist to determine that this hoist is suitable to be used in conjunction with any other equipment. The user must also determine that this hoist and other components used will be in strict conformity with the provisions of National, Provincial, and local ordinances and regulations.

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 2 of 43
---------------------	------------------------	-------------	--------------

# Table of Contents

- 1. SAFETY ..... 5
  - a) Hazard Symbols Used in this Manual ..... 5
  - b) Safety Instructions ..... 6
  - c) General Hazard Warnings ..... 9
  - d) Mechanical Hazards ..... 9
  - e) Electrical Hazards ..... 10
  - f) Environmental Hazards ..... 10
  - g) Hazard Prevention ..... 10
  - h) Wire Rope Warnings ..... 11
- 2. WIRE ROPE ..... 12
  - a) Wire Rope Inspection ..... 13
- 3. THE ASTRO E2200 HOIST ..... 14
  - a) Features of the ASTRO E2200 Hoist ..... 14
  - b) Optional Feature of the ASTRO E2200 Hoist ..... 15
  - c) Specifications ..... 16
- 4. PARTS OF THE ASTRO E2200 HOIST ..... 17
  - a) Front View ..... 17
  - b) Back View ..... 18
  - c) Side Views Showing Labels ..... 18
- 5. INSTALLING THE HOIST ON A PLATFORM ..... 19
- 6. REEVING THE PRIMARY SUSPENSION WIRE ROPE ..... 20
- 7. REEVING THE OPTIONAL SECONDARY WIRE ROPE ..... 21
- 8. DAILY TESTING AND INSPECTION ..... 21
  - a) Testing the Control Switch ..... 22
  - b) Testing the Overspeed Brake ..... 23
  - b) Testing the Overspeed Brake Test Button ..... 24
  - c) Testing the Controlled Descent ..... 25
  - d) Testing the Emergency Stop Button ..... 25
- 9. OPERATING THE HOIST ..... 26
  - a) Inspect after Previous Use ..... 26
  - b) Test the Emergency Stop Button ..... 27
  - c) Cautions for Cold Weather Operation ..... 28

*Continued on next page* 

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 3 of 43
---------------------	------------------------	-------------	--------------


## Table of Contents (Continued)


10. DEREEVING .....	29
a) Removing the Primary Suspension Wire Rope .....	29
b) Removing the Optional Secondary Wire Rope.....	30
11. HOIST MAINTENANCE.....	31
a) Regular Maintenance.....	31
b) Special Maintenance.....	31
12. TROUBLESHOOTING .....	32
a) No Power to Platform.....	32
c) Hoist does not Run .....	33
d) Wire Rope will not Reeve.....	33
e) Motor runs Normally, but Hoist will not Lift.....	34
f) Hoist Hums, Starts Slowly and is Sluggish.....	34
g) Overspeed Flywheel does not Turn while Hoist moves ↑UP or ↓DOWN and YOU ARE IN THE AIR.....	35
h) Overspeed Flywheel does not Turn while Hoist moves ↑UP or ↓DOWN and YOU ARE ON THE GROUND.....	35
i) Cannot Reset the Overspeed Brake Reset Knob .....	36
j) Hoist does not Stop Immediately when the Control Switch is Released.....	37
k) You hear Unusual Noises coming from the Hoist and YOU ARE IN THE AIR.....	37
l) You hear Unusual Noises coming from the Hoist and YOU ARE ON THE GROUND.....	38
m) Hoist Operates in ↓DOWN Direction when Overspeed Brake Test Button is Depressed .....	38
13. CODE OF SAFE PRACTICES FOR SUSPENDED SCAFFOLDS .....	39



### Symbol Legend


The following symbols found in this manual categorize important tasks related to operation and maintenance of this hoist:

 = Inspect

 = Verify

 = Perform process




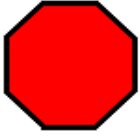


Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 4 of 43
---------------------	------------------------	-------------	--------------



## 1. SAFETY

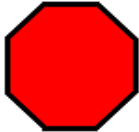This manual includes symbols that denote information that is important for hazard avoidance. Read carefully and follow all instructions when you see these symbols.

### A) HAZARD SYMBOLS USED IN THIS MANUAL

Symbol	Term	Meaning
	STOP	Stop action and follow instructions before continuing.
	WARNING	Warns against possible immediate death or serious injury.
	CAUTION	Warns against possible injury.
	ELECTRICAL HAZARD	Warns against possible electrical shock hazard.
	READ	Must read this before performing any action that follows.
	NOTE/TIP	Remember and take the following into account.

## B) SAFETY INSTRUCTIONS

Every year, workers on suspended scaffolds are injured, become disabled, or are killed because of carelessness or because they did not understand how to correctly operate the equipment. Do not become one of them. Know how to use this equipment and prevent accidents.

NEVER operate equipment that you DO NOT understand. You may cause accidents, resulting in injury or death to you or people around you.

This instruction manual is not all inclusive. It is impossible to anticipate every possible way this equipment may be used, and all possible hazardous situations. It is very important that you determine for yourself whether the equipment is safe. You must understand the operating characteristics of this hoist. You must understand how the hoist will operate in your application. You must be certain not to put yourself or others in danger, or cause damage to property or other persons. Call your hoist supplier if you have any questions concerning this equipment.

1. Read and understand this manual **BEFORE** using this equipment.
2. Setup and use must comply with Power Climber instructions and local codes.
3. Use the Troubleshooting Guide in this manual to solve problems that may develop with the hoist. Repairs must only be made by people trained and authorized to do so. **NEVER** maintain or repair the equipment while the unit is suspended (above ground level).

### Operating the Hoist

4. Be careful when operating the hoist in freezing temperatures. Water or moisture may enter the hoist's overspeed brake or traction assembly. See Cold Weather Operating instructions in this manual.
5. Be careful when operating the hoist in high winds. It is recommended to consider stopping work or adding stabilization at wind speeds of 25 mph or more when working on a 2-line suspended platform. When working on a single line platform, stabilization should be used in winds above 20 mph. Avoid carrying large panelized materials which can act like a sail in high winds.
6. Do not remove any parts from the hoist without replacing them. Do not change or substitute any approved hoist parts for parts that do not meet manufacturer's specifications. Do not modify this hoist without prior approval from Power Climber. Modifications can put you in danger if not done correctly. Making modifications can also void any manufacturer's warranty and make you liable for any damage.
7. Maintain clearances and make sure no obstructions interfere with vertical travel.

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 6 of 43
---------------------	------------------------	-------------	--------------

8. Rotate the operating switch by hand only. Do not use foreign objects to operate the hoist.
9. When not in use, store hoist and stage to protect from unauthorized use. Cover the hoist if possible. Always unplug power cord when not in use and equipment is left unattended.
10. Only authorized and properly trained personnel shall operate this hoist. Each operator must determine his own fitness to operate this hoist. Consult your doctor if you are in doubt. Each operator must be free of the influence of alcohol or drugs.

## Suspended Scaffolds

11. **WARNING!** Do not use suspended scaffolds unless:
  - a. You are wearing a personal fall arrest system that meets or exceeds your application requirements.
  - b. You have personally made sure that:
    - i. the roof support system is complete, properly assembled, counterweighted (or otherwise anchored), tied off, and not overloaded; and,
    - ii. hoists and platforms are not overloaded.
  - c. The wire rope is free of defects and is the size and type specified for the hoist;
  - d. Guardrails and toe boards are properly installed;
  - e. The main suspension wire rope is vertical.
12. Use approved personnel harnesses, lanyards, rope grabs, and independent lifelines at all times. Attach the lifelines to a structural member of the building or structure, never to part of the rigging unless specifically designed for this purpose.
13. Comply with all local, provincial and federal safety codes and equipment instructions.
14. If you hear any strange noises or if the hoist does not appear to work normally, stop using it immediately. Do not continue to use the equipment until it is repaired.
15. Do not allow anyone under suspended equipment. If necessary, provide protection below the suspended equipment to prevent injury to people from falling objects. Use lanyards to secure tools and materials from falling on personnel below.
16. Do not reset the overspeed brake until you have first read and completely understood the Troubleshooting Guidelines in this manual.

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 7 of 43
---------------------	------------------------	-------------	--------------

## Wire Rope

17. Inspect the wire rope before rigging. Handle, inspect, and maintain wire rope carefully during and after each job. Lubricate the wire rope according to the manufacturer's recommendations.
18. Do not use visibly worn, kinked, bird-caged, undersized, or damaged wire rope. Protect wire rope from sharp or abrasive edges of building. Do not use wire rope that has been exposed to fire, excessive wear, corrosive atmosphere, chemicals, passage of electric current, or temperatures above 200° F.

## Welding/Electrical Cautions

19. When welding from a suspended scaffold, provide proper electrical grounding for the hoist.
20. Ensure platform is grounded to the structure.
21. Insulate wire rope 4 feet above and below the platform.
22. Insulate wire rope at suspension point and ensure that the wire rope cannot come in contact with the structure at any point along its entire length, including the tail line.
23. Cover the hoist with an insulating material.
24. Avoid power lines. Make sure the platform or hand tools cannot swing or be blown within a minimum of 10 feet of a power line. Check your local codes for minimum distances. Never, under any circumstances, rig a platform above electrical power lines.

## Corrosive/Explosive Environments

25. Never operate an electric hoist in an explosive atmosphere such as a refinery, chemical plant, grain elevator, distilleries, ship or silo interiors, mines, around coal handling equipment, or around explosive organic vapors or dust.
26. Never use hoists and aluminum platforms around caustic materials, acids, or acid fumes. Use hoist covers when corrosive materials are present.

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 8 of 43
---------------------	------------------------	-------------	--------------





## c) GENERAL HAZARD WARNINGS

### WARNING

If the hoist is suspended in the air and the motor runs but the wire rope does not move through the hoist, STOP the hoist immediately! Damaged wire rope may be jammed inside the hoist. Any attempt to move the hoist up or down could damage equipment or cause injury or death.

There are many hazards when working on a suspended scaffold. The following is a list of common hazards. This list is not complete! It is provided to increase safety awareness on the job site.

## d) MECHANICAL HAZARDS

- CRUSHING between the platform and the building or structure.
- CUTTING or severing between moving machine parts.
- LOSS OF RIGGING STABILITY because of one or more of the following:
  - Insufficient counterweight or counterweights not properly fixed;
  - Inadequate mechanical strength;
  - Increase in vertical load on suspension wire because the platform encounters an obstacle, the platform overloads, or the suspension wire rope breaks;
  - Platform catches on overhang when going up.
- FALLING
  - from the platform when working;
  - by using a wire rope that is too short;
  - if the platform is not strong enough for the weight and breaks;
  - if wire rope or platform interconnections fail;
  - rigging failure can cause falling.
- IDLING due to loss of traction.
- JAMMING due to damaged wire rope.



## E) ELECTRICAL HAZARDS

- Failure of the electrical supply may delay travel of the platform.
- Control system failure can cause unwanted/unexpected movement of the platform.
- Improper power supply (voltage or frequency) may damage the hoist.



## F) ENVIRONMENTAL HAZARDS

- Consider and prepare for the effects of climate: heat/cold/ice/wind.
- Sandblasting and acid wash procedures may introduce special concerns. They may adversely affect the immediate health of an operator and may pose serious risks to the hoist and other equipment being used.



## G) HAZARD PREVENTION


- All electrical connections must be locked and supported by strain relief devices.
- Make sure the electrical cord and wire rope are long enough to allow full travel of the suspended equipment.

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 10 of 43
---------------------	------------------------	-------------	---------------




## H) WIRE ROPE WARNINGS

- Use protective gloves to handle the steel wire ropes.
- Use only Power Climber-approved steel wire rope.
- Steel wires ropes must be replaced under *any* of the following conditions:
  - More than 10 wires are broken on a length of 240 mm;
  - Excessive corrosion;
  - Damage due to heat;
  - Reduction of the nominal diameter by more than 10%;
  - Kinking (see ① below), crushing (see ② below), bird caging (see ③ below) or any other distortion of the wire rope structure.

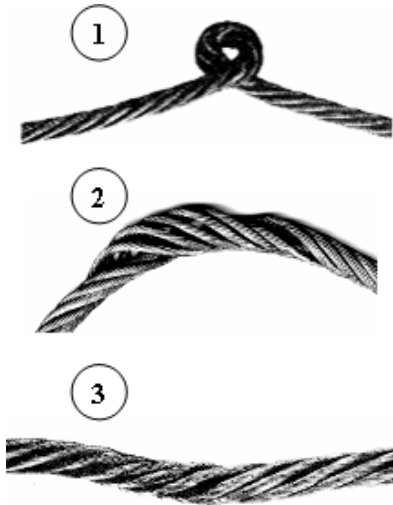

## 2. WIRE ROPE

1. Wire rope requires lubrication under normal conditions. Lightly lubricate it with a wire rope lubricant specified by the wire rope manufacturer on a monthly basis, or more often if necessary.
2. To prepare the end of IWRC wire rope for insertion, cut back the steel center at least 2" (51 mm) to allow for independent movement of the core. Braze and rough shape the end of the wire rope to form a smooth, tapered, bullet shape no more than 1/4" (6.4 mm) long. DO NOT cool the end of the hot wire rope in water or oil as this makes the end brittle and may cause it to break off. Oil the bullet after it cools to prevent rusting.
3. Always uncoil and carefully examine the wire rope before use. Worn, kinked, bird-caged, or damaged wire rope cannot be repaired. It must be replaced.

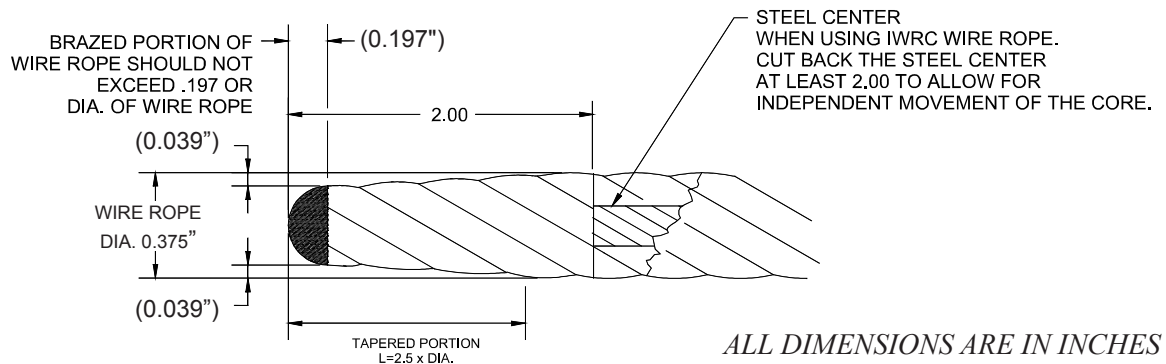

4. Use a heavy-duty thimble for the main suspension wire rope and follow the manufacturer's requirements for termination of the wire rope hardware that you are using.

### WARNING

Wire rope stretches when loaded. The diameter is reduced. Always inspect the wire rope termination and refer to the manufacturer's inspection procedures.

5. Be sure there is enough wire rope to reach the lowest possible point of travel.
6. Wire rope begins to wear the moment it is used. It must be regularly inspected to be sure it is in good condition. Wire rope must be removed from service when diameter loss or wire breakage occurs as listed.

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 12 of 43
---------------------	------------------------	-------------	---------------

## A) WIRE ROPE INSPECTION

The need for replacement of suspension wire ropes shall be determined by regular inspection and shall be based on the condition of the wire rope inspected. Wire rope in active service should be visually inspected **once every working day**. A thorough inspection shall be made once a month, or before each use if the suspension wire ropes have been inactive for 30 days or longer and are placed into service. Dated and signed monthly reports indicating the condition of the ropes found during inspections must be kept.

Any of the following conditions, or combination of conditions, shall be considered as sufficient reason for the removal of the wire rope from service:

Wire rope with one or more of the following defects shall be removed and replaced immediately:

1. Whenever there is severe corrosion. Any development of slight corrosion shall be noted and watched closely;
2. Whenever there are broken wires, as follows:
  - a. When there is more than one valley break. A valley break is a wire break occurring in the valley between two adjacent strands.
  - b. When there are six (6) randomly distributed broken wires in one rope lay or three (3) broken wires in one strand in one rope lay. (A rope lay is the length along the rope in which one strand makes a complete revolution around the rope.)
3. Whenever there are broken wires in the vicinity of attachments. If this condition is localized in an operating rope, the section in question may be eliminated by making a new attachment. This may be done instead of replacing the entire rope.
4. Whenever there is abrasion, scrubbing, flattening, or peening that causes loss of more than one-third of the original diameter of the outside wires.
5. Whenever there are severe kinks, crushing, birdcaging, or other damage resulting in distortion of the rope structure.
6. Whenever there is evidence of any heat damage resulting from a torch or caused by contact with electrical wires; and when the reduction from the nominal diameter of the rope is:
  - a. More than 1.2 mm (0.047 in) for diameters up to and including 20 mm (0.78 in)
  - b. 1.5 mm (0.059 in) for diameters 22 to 28 mm
  - c. 2.5 mm for diameters 32 to 40 mm.

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 13 of 43
---------------------	------------------------	-------------	---------------



### 3. THE ASTRO E2200 HOIST

The ASTRO E2200 is used to raise, support and lower suspended scaffolds and work cages on, or in, buildings and structures. If this hoist is used for any other purpose, you must take all necessary precautions to ensure that both the design and operation of the setup in which the hoist will be used will be hazard free, and that such use conforms to the manufacturer’s specifications.

Before using the ASTRO E2200, learn the procedures described in this manual. Any operation in violation of these instructions may result in bodily injury or death. The design and manufacturing of the ASTRO E2200 complies with UL1323 standards. The use of the ASTRO E2200 within the United States is governed by OSHA CFR 29. Consult OSHA CFR-1926 for temporary applications and OSHA CFR 29-1910 for permanent applications.

It is the duty of the employer to provide each operator with a copy of this manual.

Power Climber reserves the right to make changes or modifications to its hoist. Users of this equipment must request current operating information prior to using this equipment. Call your local hoist supplier.

This manual is included with each ASTRO E2200. Additional copies are available from your hoist supplier. Keep a current copy of this manual with the hoist at all times.

#### A) FEATURES OF THE ASTRO E2200 HOIST

Feature	Function	Benefit
Operating Range: 230 V, +/-10% OR 400 V, +/-10% (depending on model number)	<ul style="list-style-type: none"> <li>Proven reliable performance from 207 to 253 run volts or 360 to 440 run volts, depending on which motor is used.</li> <li>Tested in 75 min. continuous run tests</li> </ul>	<ul style="list-style-type: none"> <li>Reduces service calls</li> <li>Extends electric component life</li> <li>Eliminates power-induced down time</li> <li>Allows longer drops with yoked hoists</li> <li>Saves time and money</li> </ul>
Load Sensitive Traction	<ul style="list-style-type: none"> <li>Applies only the traction needed to lift load, not full 2,200 lbs (9.79 kN) lifting force on rope</li> </ul>	<ul style="list-style-type: none"> <li>Greater tolerance of wire rope condition</li> <li>Saves wear and tear on rope, extends wire rope life</li> <li>Prevents costly wire rope jams in field</li> </ul>
Voltage Indicator	<ul style="list-style-type: none"> <li>Indicates voltage is flowing to unit</li> </ul>	<ul style="list-style-type: none"> <li>Easy visual inspection can eliminate a service call</li> <li>Technician can diagnose voltage problem by phone</li> </ul>

*Continued on next page*

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 14 of 43
---------------------	------------------------	-------------	---------------

**FEATURES OF THE ASTRO E2200 HOIST** *(continued)*

Feature	Function	Benefit
Built-in Overspeed Brake	<ul style="list-style-type: none"> <li>Stops hoist in overspeed condition</li> <li>Can't be left behind in shop, bypassed, or dismantled</li> </ul>	<ul style="list-style-type: none"> <li>Ensures greater operator safety</li> <li>Improved reliability</li> </ul>
Controlled Descent	<ul style="list-style-type: none"> <li>Allows downward travel at a controlled rate of speed in the event of power loss</li> </ul>	<ul style="list-style-type: none"> <li>Eliminates need for rescue</li> <li>Allows self-rescue of workers and platforms</li> </ul>
Built-in Secondary Wire Rope	<ul style="list-style-type: none"> <li>Allows use of secondary suspension wire rope for required applications (double deck, overhead protection, some industrial applications) or to eliminate independent safety lines at very minor additional cost</li> <li>Designed to mount into hoist for maximum durability and security</li> </ul>	<ul style="list-style-type: none"> <li>More versatile hoist ready for any application</li> <li>Eliminates possible loss / damage because it is built-in, rather than an added on</li> <li>Saves money because it is less expensive than other manufacturers' products</li> </ul>
Optional Overload	<ul style="list-style-type: none"> <li>Will trip at 1.5 times the rated load: 3,300 lbs (1,500 kg)</li> </ul>	<ul style="list-style-type: none"> <li>Reduces damage to equipment from excess loads</li> </ul>
Remote Ready	<ul style="list-style-type: none"> <li>Built-in pendant port accepts plug-in remote control</li> <li>Compatible with 700786-xx or 709854-xx series remotes</li> </ul>	<ul style="list-style-type: none"> <li>No need to drill and wire remote into hoist</li> <li>Leaves hoist mounted controls operable</li> </ul>

**B) OPTIONAL FEATURE OF THE ASTRO E2200 HOIST**

Feature	Function	Benefit
(Optional) Top Limit Switch	<ul style="list-style-type: none"> <li>Stops upward travel on contact with an overhead obstruction for special applications</li> </ul>	<ul style="list-style-type: none"> <li>Easy installation</li> </ul>

c) SPECIFICATIONS

Hoist	3-Phase; 3 hp; 35 ft/min max.
Working Load Limit (WLL)	2,200 lbs (997 kg)
Power Supply	230 or 400 VAC (depending on model number); 60 Hz; 3-phase with automatic thermal protection
Amperage at WLL	11 Amps 230 V required at hoist, or 6 Amps 400 V (depending on motor)
Hoist Weight	150 lbs (68 kg)
Wire Rope Diameter	3/8" (9.53 mm)
Wire Rope Specifications	<p>4x26, Warrington Seale, Polypropylene High Density Core, Right Regular Lay, preformed wire rope with bright or galvanized finish.</p> <p style="text-align: center;">OR</p> <p>6x19, IWRC (Independent Wire Rope Core), Right Regular Lay, IPS (Improved Plow Steel) or EIPS (Extra Improved Plow Steel), preformed wire rope with bright or galvanized finish.</p> <p>User must verify that the wire rope meets or exceeds applicable codes for breaking strength safety factor. US temporary applications require 6:1.</p>


Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 16 of 43
---------------------	------------------------	-------------	---------------






## 4. PARTS OF THE ASTRO E2200 HOIST


### A) FRONT VIEW

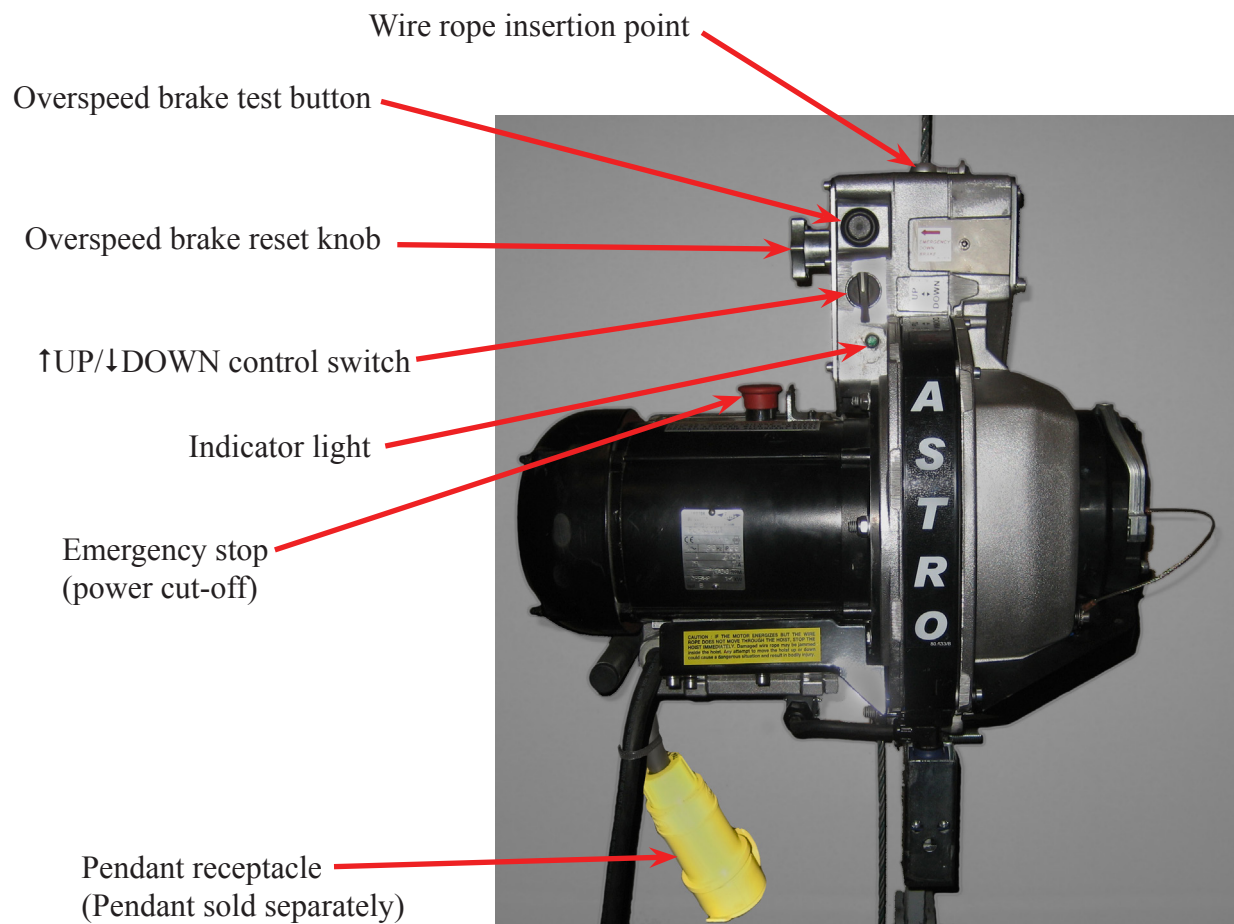

## B) BACK VIEW

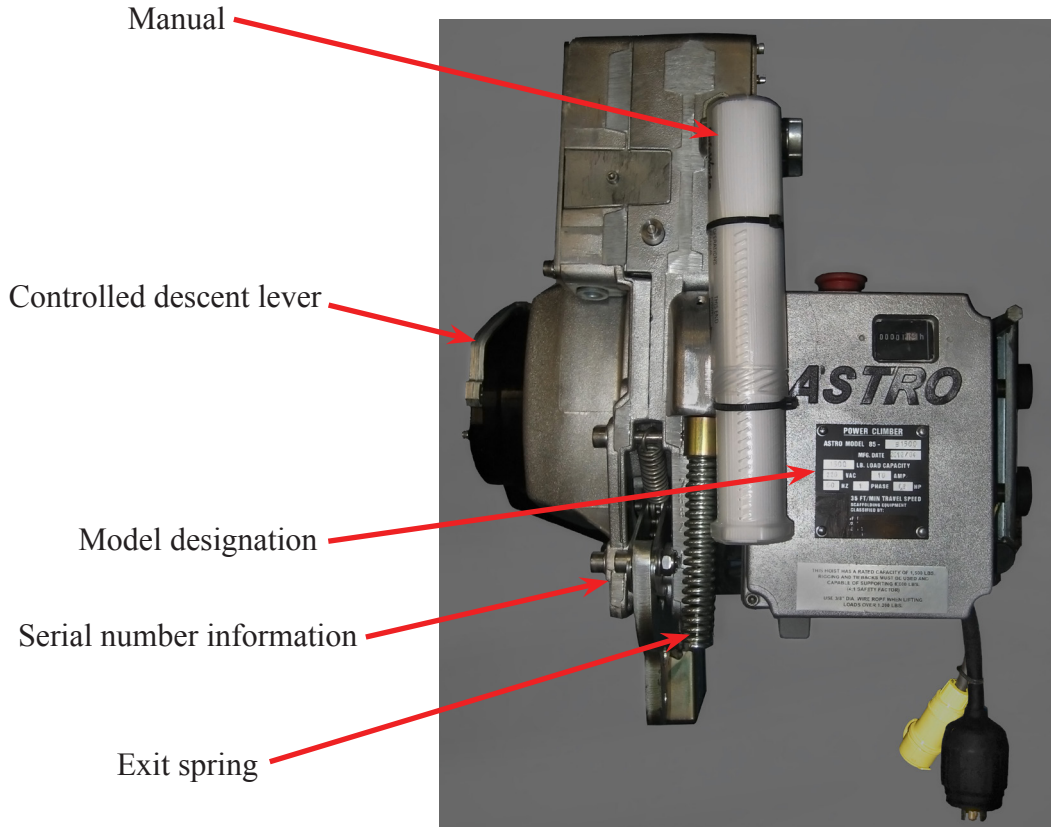

## C) SIDE VIEWS SHOWING LABELS

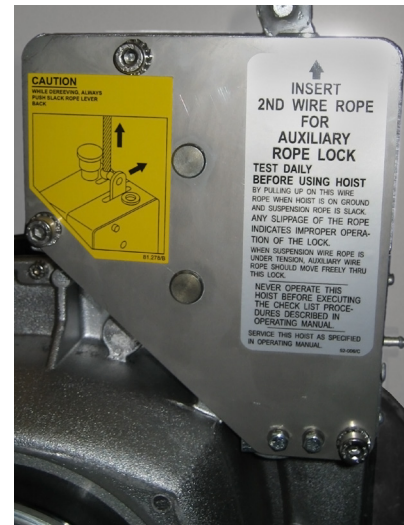

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 18 of 43
---------------------	------------------------	-------------	---------------





## 5. INSTALLING THE HOIST ON A PLATFORM



  The electric supply must have sufficient capacity, and the circuit breakers must be properly rated.

- The voltage loss for 100 ft (30.48 m) of 10/4 electrical cable is 2 volts for each hoist used.
- If startup is sluggish, determine the voltage at the motors when running. UP is between 207-253 VAC, or 360-440 VAC, depending on model number.
- If the voltage is lower than 207 or 360 VAC (depending on motor) when running:
  - Increase voltage with a transformer at the power source when voltage is low, **OR**
  - Use larger gauge or separate electrical cables for each hoist to improve voltage supply.
  - Do not start both hoists at the same time to ensure better hoist performance.
  - Always maintain a level platform.

 = Inspect

 = Verify

 = Perform process

Document No: 710063

Issue Date: 3-Oct-2014

Revision: B

Page 19 of 43

Phone: (800) 560-CLIMB (2546)

Email: [Sales@PowerClimber.com](mailto:Sales@PowerClimber.com)  
Website: [PowerClimber.com](http://PowerClimber.com)




Fax: (866) 470-8722

*This document and all copies are the property of Power Climber. All dimensions and data are indicative only.  
The user must ensure that the equipment complies with local rules and regulations.*





## 6. REEVING THE PRIMARY SUSPENSION WIRE ROPE

-  Check that the overspeed reset knob is reset. While holding round eyelet guide vertical, push the main suspension wire rope bullet end into hoist.
-  Operate the hoist in the ↑ UP direction while pushing the rope into the hoist.
-  Make sure the wire rope runs freely through the wire rope exit spring.




If it is not possible to lower the platform to the ground, secure the tail line\* to prevent the platform from running off the suspension ropes. Before rigging in such an area, consult a safety professional.




\*Tail line with loop termination

**NOTE:** Do not expose the wire rope to fire, temperatures above 200° F (93.3° C), passage of electrical current, or corrosive atmospheres and chemicals. Such exposure will make the wire rope unsafe.

Acids will corrode and reduce the strength of both the inner and outer strands. When using corrosive chemicals, discard the wire rope after completing the project, or sooner if any damage is evident. Do not save wire rope that has been in contact with corrosives. When in doubt, replace the wire rope.


 = Inspect


 = Verify

 = Perform process


Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 20 of 43
---------------------	------------------------	-------------	---------------

## 7. REEVING THE OPTIONAL SECONDARY WIRE ROPE

 Push secondary wire rope through the wire rope insertion point for the secondary rope until it exits the hoist.

 Attach a 25 lb (11.5 kg) weight to the end of the secondary wire rope to assist secondary rope travel.

Wire rope insertion point 

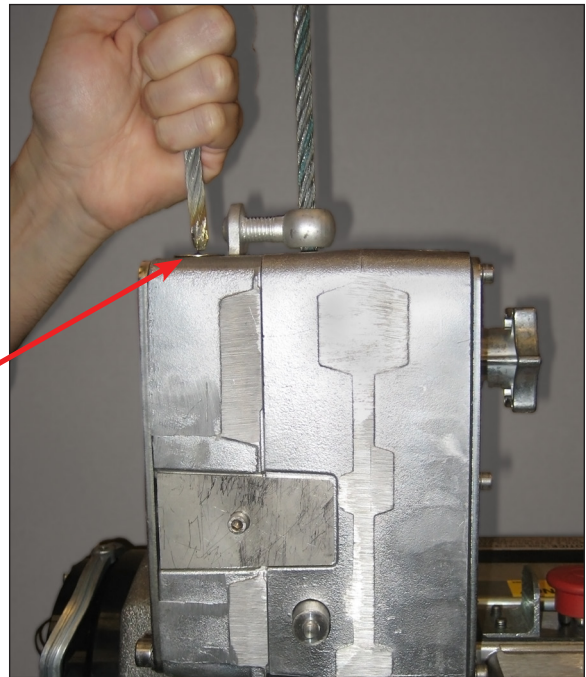



## 8. DAILY TESTING AND INSPECTION

### WARNING

Perform all daily tests to ensure correct operation! Do not use the hoist for lifting until it has successfully completed the daily tests.

The following tests must be performed at the start of each work shift. If the hoist fails any test, **DO NOT USE THE HOIST UNTIL IT IS REPAIRED**. Refer to the pictures on pages 17 and 18 to identify components. All tests are performed at or near ground level.

 = Inspect

 = Verify

 = Perform process

Document No: 710063

Issue Date: 3-Oct-2014



Revision: B

Page 21 of 43

## A) TESTING THE CONTROL SWITCH



**WARNING!** This test is important if the hoist has recently been moved to a new work site, there has been a change in the power supply at the work site or the hoist has recently been repaired, each of which circumstance may have rendered the hoist out of phase.



  Rotate the control switch in the ↑UP direction as shown at right. If the hoist goes down, STOP IMMEDIATELY. This is an indication that the hoist may be out of phase. DO NOT USE THE HOIST. Contact your supervisor.




 = Inspect       = Verify       = Perform process


Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 22 of 43
---------------------	------------------------	-------------	---------------

## B) TESTING THE OVERSPEED BRAKE


  While powering the hoist ↑ UP and ↓ DOWN approximately 3 feet (0.9 m), look through the window into the overspeed compartment to see whether the flywheel is turning.


Overspeed compartment window

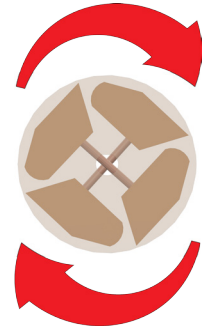


 Dereeve the wire rope:


1. Re-insert the rope about 12" (30 cm) into the hoist.
2. Holding the wire rope firmly, pull it out quickly. If the brake is working correctly, it will grab and hold the wire rope in less than 4" (10 cm).
3. Repeat this test at least 3 times. If the brake does not work correctly every time, DO NOT USE THE HOIST. Return the hoist to your supplier.

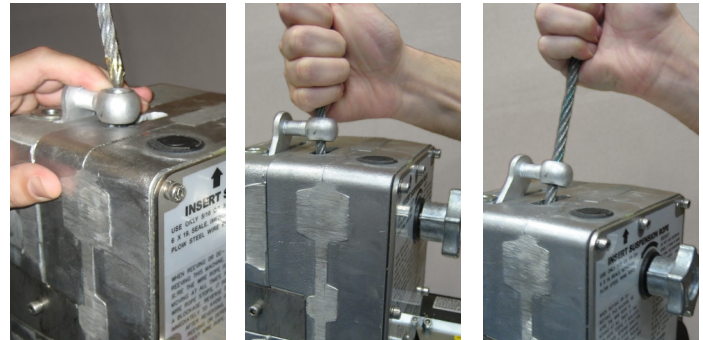

 Reset the overspeed brake by turning the knob counter clockwise.



 = Inspect


 = Verify

 = Perform process

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 23 of 43
---------------------	------------------------	-------------	---------------





## B) TESTING THE OVERSPEED BRAKE TEST BUTTON

 Rotate the control switch in the ↑ UP direction and raise the platform approximately 3 feet (0.9 meters).

Overspeed brake test button 

Control switch 

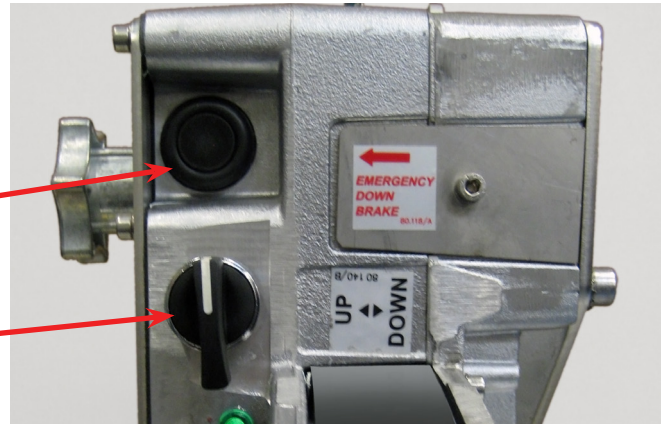


 While you rotate the control switch in the ↓DOWN direction, push the overspeed brake test button.


 The hoist should stop immediately.


Overspeed brake test button 

Control switch 

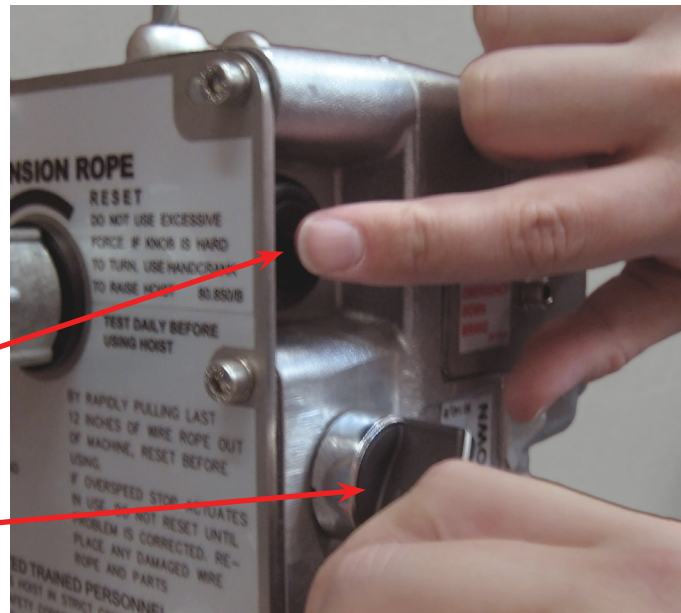

**WARNING!** If the hoist does not stop immediately, this indicates the motor is out of phase. Stop operating both switches and CORRECT THE PROBLEM BEFORE THE HOIST IS OPERATED.

 = Inspect


 = Verify



 = Perform process




## c) TESTING THE CONTROLLED DESCENT

 Raise the hoist approximately 3 feet (0.9 meters).

 Disconnect the power supply.


  During this test, or when you are actually using the controlled descent feature, pull the controlled descent lever CAREFULLY, to make sure the hoist does not overspeed. The hoist should descend at a slow, controlled speed.


Controlled descent lever

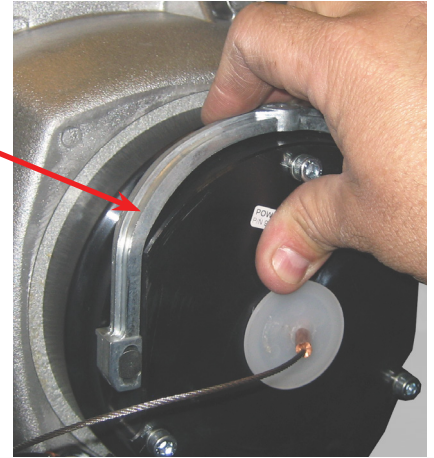

**WARNING!** If the overspeed brake trips during this test, the controlled descent system is not working properly and **THE HOIST SHOULD NOT BE USED.**

## d) TESTING THE EMERGENCY STOP BUTTON


 While the hoist is running ↑UP or ↓DOWN, press the red emergency stop button.


 Once the emergency stop button has been pressed, the hoist should not move at all.

  To reset the emergency stop button, pull the button up.

Emergency stop button



 = Inspect

 = Verify

 = Perform process



## 9. OPERATING THE HOIST

### WARNING

BEFORE operating this hoist, you must understand and follow the instructions in this manual. You must be properly trained, physically fit and authorized to operate the hoist. Failure to comply with these instructions could result in serious injury or death.

- **DO NOT OPERATE THE HOIST IF** you hear unusual noises.
- **DO NOT OPERATE THE HOIST IF** adjustments or repairs seem necessary.
- **DO NOT OPERATE THE HOIST IF** any warning, operating or capacity instructions are unclear, missing, illegible or damaged.
- Report any problems to your supervisor and also notify the next operator when changing shifts. Tag the hoist “**DO NOT USE UNTIL REPAIRED**”.
- NEVER operate an electric hoist or any electrical equipment in an explosive atmosphere. Explosive atmospheres exist around refineries, chemical plants, grain elevators, distilleries, inside silos and mines or around coal handling equipment. This is not a complete list! Consult an expert if you are in doubt about the safety of your immediate surroundings.

### A) INSPECT AFTER PREVIOUS USE


 Before operating the hoist, inspect the following:


- Wire rope
- Power supply
- Rigging
- Platform
- Hoist

 Verify that all parts are present, in proper working order, and are not damaged.

 Bolts, nuts, and clamps must be well secured.

 Ensure the hoist is secured to the stirrup with SAE Grade 5 fasteners and locknuts that are properly installed.

 = Inspect

 = Verify

 = Perform process



**▲** When using the hoist in a dirty environment that contains epoxy, paint, cement, sand blast residue, or corrosive material, inspect the operation of the secondary overspeed brake several times a day. Protective hoist covers are recommended in these environments. Contact your hoist supplier.

## B) TEST THE EMERGENCY STOP BUTTON


**■** For normal ascent and descent of the hoist, rotate the control switch to the left or right. The switch is spring loaded and returns to the OFF position and applies the brake when released. If the hoist does not stop right away, press the emergency stop and the overspeed brake test buttons.

**■** Unplug the electric supply plug from the power source.

Overspeed brake test button

↑UP / ↓DOWN control switch

Emergency stop button

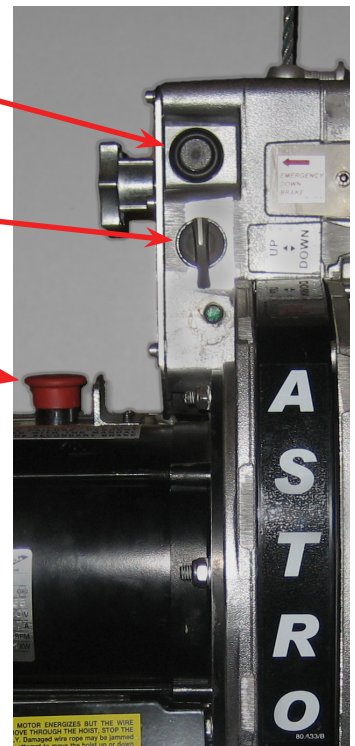



**▲** = Inspect



**○** = Verify


**■** = Perform process




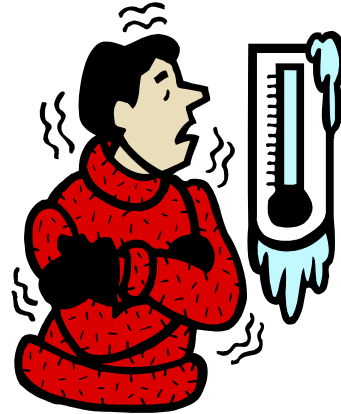
## c) CAUTIONS FOR COLD WEATHER OPERATION

  When operating the hoist in cold weather, test the secondary overspeed brake frequently to make sure it is not frozen. If the hoist will not climb or descend while you are trying to test the overspeed brake, **DO NOT USE THE HOIST** unless this is corrected during the thaw-out process outlined below.

  If the overspeed brake does not stop the hoist, **DO NOT USE THE HOIST** until the brake has been thawed, is fully dry, and is in proper working condition.

 Thaw the brake by blowing ducted dry heat (150° F / 65.6° C max.) on the brake area. This can be done with an ordinary hair dryer. **DO NOT USE AN OPEN FLAME** on the hoist.

 If the hoist does not operate properly after thawing, **DO NOT USE**. Return the hoist to your supplier.



**WARNING!** Use extreme caution when operating the hoist in freezing temperatures. Test frequently for normal hoist operation. All tests must be done within 3 feet (0.9 meters) of ground level.


 = Inspect       = Verify       = Perform process


## 10. DEREEVING


### A) REMOVING THE PRIMARY SUSPENSION WIRE ROPE



**WARNING!** In order to prevent the platform or hoists from tipping and causing injury, ensure that the platform is properly supported on a stable surface before putting slack on the primary suspension wire rope.

 Verify that platform is supported by a flat surface before putting slack on the primary suspension wire rope.

 While on a flat surface, the primary suspension line can be dereeved when the control switch is rotated in the ↓DOWN direction.

 You may have to help remove the last 15" (38 cm) of wire rope. Do this by grabbing the wire rope above the rope insertion point, holding the overspeed brake reset knob in the “reset” position, and slowly pulling the primary suspension wire rope out of the hoist.

 = Inspect       = Verify       = Perform process



Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 29 of 43
---------------------	------------------------	-------------	---------------


## B) REMOVING THE OPTIONAL SECONDARY WIRE ROPE





**WARNING!** Ensure that the platform is properly supported on a stable surface before putting slack on the primary suspension wire rope.


If you are removing both wire ropes from the hoist, you must remove the secondary wire rope before removing the primary suspension wire rope.

  Verify hoist is secure in the stirrup mount prior to applying slack in the primary suspension wire rope. In order to remove the secondary wire rope, there must be no slack on the primary suspension wire rope.

 Remove the counterweight from the end of the secondary wire rope.

 Pull the secondary wire rope out of the hoist by hand.


 If necessary, the primary wire rope can now be removed from the hoist.

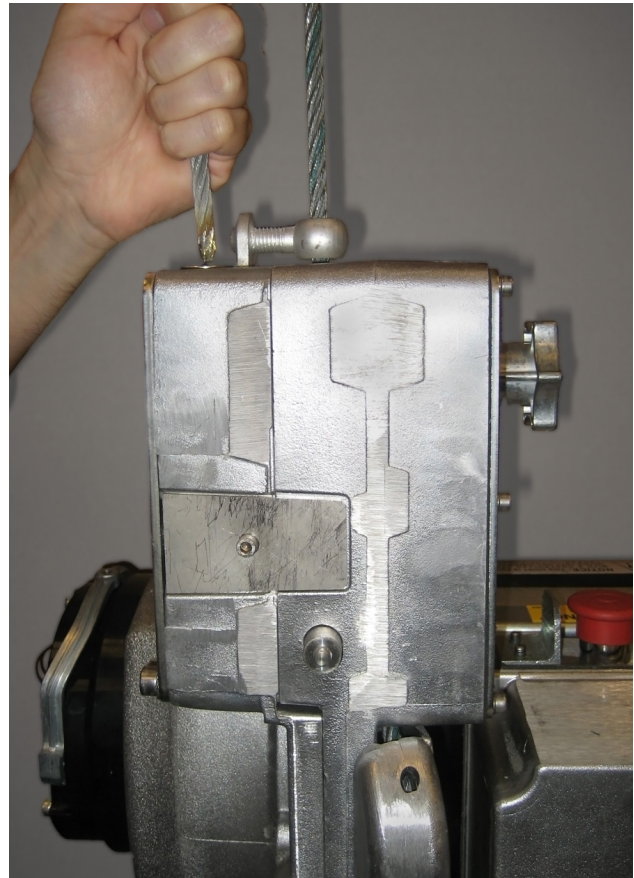

 = Inspect       = Verify       = Perform process

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 30 of 43
---------------------	------------------------	-------------	---------------



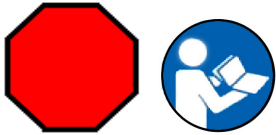





## 11. HOIST MAINTENANCE

### A) REGULAR MAINTENANCE

 The hoist should be returned to a certified Power Climber service center for periodic maintenance at least once a year from the date it was placed into service.

  More frequent service may be required if the hoist is subjected to dirty environments.

### B) SPECIAL MAINTENANCE

   If the hoist fails any inspection or operation, it should be returned for service.










 = Inspect       = Verify       = Perform process

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 31 of 43
---------------------	------------------------	-------------	---------------

## 12. TROUBLESHOOTING



**STOP!** Read ALL troubleshooting guidelines before attempting any solution.














Problem	Possible Cause and Solution
<p>A) <b>NO POWER TO PLATFORM</b></p> <p>AND</p> <p> Voltage indicator light is <b>OFF</b>.</p> <p>Consult your supervisor to correct problems.</p>	<ul style="list-style-type: none"> <li> Power at junction box is off.</li> <li> Circuit breaker is tripped.</li> <li>  Plugs are not connected; check hoist, yoke, power cord, and power source.</li> <li> Damaged electrical cord.</li> <li>  Power indicator light is burnt out.</li> <li> Not enough power is being supplied to hoist.</li> </ul>

*More troubleshooting solutions on next page*

 
 = Inspect       = Verify       = Perform process

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 32 of 43
---------------------	------------------------	-------------	---------------




Problem	Possible Cause and Solution
<p>c) <b>HOIST DOES NOT RUN</b></p> <p>AND</p> <p> Voltage indicator light is <b>ON</b>.</p>	<p>  If the motor is hot, thermal overload protection may have been tripped. Allow motor to cool and see if it resets. This may take 30 minutes or more.</p> <p> Frequent stops and starts, high outside temperature, a dragging brake, or overloading can cause the motor to heat up.</p> <p> Determine if overspeed device is activated.</p>
<p>d) <b>WIRE ROPE WILL NOT REEVE</b></p>	<p> Increase hand pressure on the wire rope while rotating the control switch in the ↑ UP direction.</p> <p> Take the wire rope out, rotate it 180° and put it back into the hoist while rotating the control switch in the ↑ UP direction.</p> <p>  Poor bullet; prepare new end.</p> <p>  End of wire rope is bent or kinked; prepare new end.</p> <p>  Dirt or other material is obstructing the rope inside the hoist. Clean out with air or flush with water.</p>

*More troubleshooting solutions on next page*



= Inspect

 







= Verify



= Perform process






Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 33 of 43
---------------------	------------------------	-------------	---------------

Problem	Possible Cause and Solution
<p>E) <b>MOTOR RUNS NORMALLY, BUT HOIST WILL NOT LIFT</b></p>	<p> Make sure the bullet end of the wire rope has come out of the wire rope exit spring.</p> <p>  Inspect the wire rope for damage or wear. Replace as necessary.</p> <p></p> <p><b>WIRE ROPE MAY BE JAMMED. DO NOT OPERATE HOIST. CALL YOUR SUPERVISOR.</b></p>
<p>F) <b>HOIST HUMS, STARTS SLOWLY AND IS SLUGGISH</b></p>	<p>  Check run voltage. If not correct, do any or all of the following:</p> <ul style="list-style-type: none"> <li>• Run separate cords for each hoist.</li> <li>• Use shorter cords.</li> <li>• Use short cord with larger wires.</li> <li>• Add a booster transformer at the power source.</li> </ul>


*More troubleshooting solutions on next page*


 = Inspect       = Verify       = Perform process

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 34 of 43
---------------------	------------------------	-------------	---------------

Problem	Possible Cause and Solution
<p>G) <b>OVERSPEED FLYWHEEL DOES NOT TURN WHILE HOIST MOVES ↑UP OR ↓DOWN AND YOU ARE IN THE AIR</b></p>	<p></p> <p><b>DO NOT OPERATE HOIST. CALL YOUR SUPERVISOR.</b></p> <p> Push the overspeed brake test button and wait to be rescued.</p>
<p>H) <b>OVERSPEED FLYWHEEL DOES NOT TURN WHILE HOIST MOVES ↑UP OR ↓DOWN AND YOU ARE ON THE GROUND</b></p>	<p></p> <p><b>DO NOT OPERATE HOIST.</b></p> <p>  Check and correct the following:</p> <ul style="list-style-type: none"> <li>• Clear obstructions such as dirt or other materials.</li> <li>• Wire rope may be worn out. Call your supervisor.</li> <li>• Hoist parts may be worn out. Call your supervisor,</li> </ul>

*More troubleshooting solutions on next page*

 = Inspect


 = Verify


 = Perform process

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 35 of 43
---------------------	------------------------	-------------	---------------

Problem	Possible Cause and Solution
<p>1) <b>CANNOT RESET THE OVERSPEED BRAKE RESET KNOB</b></p>	<div data-bbox="581 346 722 478" data-label="Image"> </div> <p><b>WIRE ROPE MAY BE JAMMED. DO NOT OPERATE HOIST.</b></p> <div data-bbox="581 604 682 655" data-label="Image"> </div> <p><b>DO NOT RESET THE OVERSPEED UNTIL:</b></p> <ul style="list-style-type: none"> <li>• You have determined that there is enough wire rope to reach a safe landing surface.</li> <li>• You know that the wire rope is not jammed in the hoist.</li> <li>• You know the reason that the overspeed has been tripped and there will be no danger when it is reset.</li> </ul> <div data-bbox="581 945 630 995" data-label="Image"> </div> <p>Power the hoist up a few inches at the same time as you turn the reset knob counter-clockwise until the reset knob engages.</p> <div data-bbox="581 1071 1253 1432" data-label="Image"> </div>


*More troubleshooting solutions on next page*

 = Inspect

 = Verify

 = Perform process



Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 36 of 43
---------------------	------------------------	-------------	---------------


Problem	Possible Cause and Solution
<p><b>J) HOIST DOES NOT STOP IMMEDIATELY WHEN THE CONTROL SWITCH IS RELEASED</b></p>	<ul style="list-style-type: none"> <li><input type="checkbox"/> Push the overspeed brake test button and wait to be rescued.</li> <li><input type="checkbox"/> Call your supervisor.</li> <li><input type="checkbox"/> Return the hoist to a certified Power Climber service center for servicing.</li> </ul>
<p><b>K) YOU HEAR UNUSUAL NOISES COMING FROM THE HOIST AND YOU ARE IN THE AIR</b></p>	<div style="text-align: center;">  <p><b>WIRE ROPE MAY BE JAMMED. DO NOT OPERATE. ANY ATTEMPT TO OPERATE THE HOIST MAY CAUSE SERIOUS INJURY OR DEATH.</b></p> </div> <ul style="list-style-type: none"> <li><input type="checkbox"/> Push the emergency stop button.</li> <li><input type="checkbox"/> Push the overspeed brake test button and wait to be rescued.</li> <li><input type="checkbox"/> Unplug the hoist from the power cord.</li> <li><input type="checkbox"/> Call your supervisor.</li> <li><input type="checkbox"/> Return the hoist to a certified Power Climber service center for servicing.</li> </ul>


*More troubleshooting solutions on next page*

= Inspect    
  = Verify    
  = Perform process

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 37 of 43
---------------------	------------------------	-------------	---------------

Problem	Possible Cause and Solution
<p>L) <b>YOU HEAR UNUSUAL NOISES COMING FROM THE HOIST AND YOU ARE ON THE GROUND</b></p>	 <p><b>WIRE ROPE MAY BE JAMMED. DO NOT OPERATE.</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> <input type="radio"/> Check for damaged wire rope and replace as necessary.</li> <li><input type="checkbox"/> <input type="radio"/> Check for dirt on the wire rope and clean/lubricate as necessary.</li> <li><input type="checkbox"/> <input type="radio"/> Check the hoist for visible signs of damage.</li> <li><input type="checkbox"/> Call your supervisor.</li> <li><input type="checkbox"/> Return the hoist to a certified Power Climber service center for servicing.</li> </ul>
<p>M) <b>HOIST OPERATES IN ↓DOWN DIRECTION WHEN OVERSPEED BRAKE TEST BUTTON IS DEPRESSED</b></p>	 <p><b>HOIST MAY BE OUT OF PHASE. DO NOT OPERATE.</b></p> <ul style="list-style-type: none"> <li><input type="checkbox"/> Call your supervisor.</li> <li><input type="checkbox"/> Have a certified electrician correct phase on outlet receptacle.</li> <li><input type="checkbox"/> Contact a certified Power Climber service center for servicing and repair.</li> </ul>

 = Inspect

 = Verify

 = Perform process

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 38 of 43
---------------------	------------------------	-------------	---------------



# 13. CODE OF SAFE PRACTICES FOR ADJUSTABLE SUSPENDED SCAFFOLDS

CO-DEVELOPED BY THE SCAFFOLDING, SHORING & FORMING INSTITUTE (SSFI) and THE SCAFFOLD AND ACCESS INDUSTRY ASSOCIATION, INC. (SAIA)

It shall be the responsibility of all users to read and comply with the following common sense guidelines which are designed to promote safety in the erecting, dismantling and use of adjustable suspended scaffolds. These guidelines do not purport to be all-inclusive nor to supplant or replace other additional safety and precautionary measures. If these guidelines conflict with any local, provincial, state, federal or other government regulations, the regulations shall supersede these guidelines and it shall be the responsibility of each user to comply therewith.

## I. GENERAL GUIDELINES

- A. **POST THESE SAFE PRACTICES** in a conspicuous place. Be sure that all persons who erect, use, relocate, or dismantle adjustable suspended scaffold systems are fully aware of them. Use them in tool box safety meetings.
- B. **FOLLOW ALL EQUIPMENT MANUFACTURER’S RECOMMENDATIONS** as well as all local, provincial, state and federal codes, ordinances and regulations relating to adjustable suspended scaffold systems.
- C. **SURVEY THE JOB SITE.** A competent person shall survey the job site for hazards such as exposed electrical wires, obstructions and, unguarded roof edges or openings.
- D. **INSPECT ALL EQUIPMENT BEFORE EACH USE.** Never use any equipment that is damaged or defective in any way. Mark it or tag it as damaged or defective and remove it from the job site.
- E. **ERECT AND DISMANTLE ADJUSTABLE SUSPENDED SCAFFOLD EQUIPMENT** in accordance with the design and/or manufacturer’s recommendations.
- F. **DO NOT ERECT, DISMANTLE OR ALTER ADJUSTABLE SUSPENDED SCAFFOLD SYSTEMS** except under the supervision of a competent person.
- G. **DO NOT ABUSE OR MISUSE ADJUSTABLE SUSPENDED SCAFFOLD EQUIPMENT.** Never overload any equipment.
- H. **ERECTED ADJUSTABLE SUSPENDED SCAFFOLDS ARE TO BE INSPECTED REGULARLY** by the user to be sure that they are maintained in a safe condition. Stop work and report any unsafe condition to your supervisor.
- I. **NEVER TAKE CHANCES! IF IN DOUBT REGARDING THE SAFETY OR USE OF ADJUSTABLE SUSPENDED SCAFFOLDS, CONSULT A QUALIFIED PERSON.**

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 39 of 43
---------------------	------------------------	-------------	---------------



- J. NEVER USE ADJUSTABLE SUSPENDED SCAFFOLD EQUIPMENT FOR PURPOSES FOR WHICH IT WAS NOT INTENDED.
- K. A COMPETENT PERSON SHALL CONSIDER STOPPING WORK WHEN WIND SPEED EXCEEDS 25 MPH FOR 2 POINT ADJUSTABLE SUSPENDED SCAFFOLDS OR 20 MPH FOR SINGLE POINT SUSPENSION. If materials on a platform create a sail effect, stopping work at lower wind speeds must be considered.
- L. ADJUSTABLE SUSPENDED SCAFFOLD SYSTEMS are to be installed and used in accordance with the manufacturer’s recommended procedures.
- M. ADJUSTABLE SUSPENDED PLATFORMS MUST NEVER BE OPERATED NEAR LIVE POWER LINES unless proper precautions are taken. Contact the power service provider for advice.
- N. ALWAYS UTILIZE FALL ARREST EQUIPMENT when working on adjustable suspended scaffolds or when working near unguarded edges.
- O. DO NOT WORK FROM, INSTALL OR MOVE ADJUSTABLE SUSPENDED SCAFFOLDS if you are sick or impaired in any way.
- P. DO NOT WORK ON ADJUSTABLE SUSPENDED SCAFFOLDS when under the influence of alcohol or drugs.
- Q. DEBRIS SHOULD NOT BE STORED OR ALLOWED TO ACCUMULATE ON A PLATFORM.
- R. INDEPENDENT ADJUSTABLE SUSPENDED SCAFFOLDS ARE TO BE POSITIONED SO AS TO AVOID OVERLAPPING OR POSSIBLE INTERFERENCE FROM ANOTHER SCAFFOLD.

**II. GUIDELINES FOR ERECTION AND USE OF ADJUSTABLE SUSPENDED SCAFFOLD SYSTEMS**

**A. RIGGING:**

1. UTILIZE FALL PROTECTION EQUIPMENT when rigging near unguarded edges.
2. SUPPORTING DEVICES must be capable of supporting the hoist rated load with a safety factor of 4.
3. ALL OVERHEAD RIGGING must be secured from unwanted movement in any direction.
4. COUNTERWEIGHTS USED WITH OUTRIGGER BEAMS must be of a non-flowable material and must be secured to the beam to prevent accidental displacement.
5. OUTRIGGER BEAMS THAT DO NOT USE COUNTERWEIGHTS must be installed and secured to the roof structure with bolts or other direct connections. Direct connections shall be evaluated by a competent person.
6. TIE BACK ALL TRANSPORTABLE RIGGING DEVICES. Tieback shall be equivalent in strength to the suspension ropes.
7. INSTALL TIEBACKS AT RIGHT ANGLES TO THE FACE OF THE BUILDING and secure them without slack, to a suitable anchor capable of supporting the hoist rated load with a safety factor of 4.

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 40 of 43
---------------------	------------------------	-------------	---------------





8. **IN THE EVENT THAT TIEBACKS CANNOT BE INSTALLED AT RIGHT ANGLES**, two tiebacks at opposing angles must be used to prevent movement.
9. **RIG AND USE HOISTING MACHINES DIRECTLY UNDER THEIR SUSPENSION POINTS** to prevent movement or side loading.

**B. WIRE ROPE AND HARDWARE:**

1. **USE ONLY WIRE ROPE AND ATTACHMENTS** specified by the hoisting machine manufacturer.
2. **HANDLE WIRE ROPE WITH CARE.** Always use gloves.
3. **COIL AND UNCOIL WIRE ROPE** in accordance with manufacturer's instructions in order to avoid kinking or damage.
4. **ASSURE THAT THE WIRE ROPE IS LONG ENOUGH** to reach to the lowest possible landing.
5. **CLEAN AND LUBRICATE WIRE ROPE** in accordance with the wire rope manufacturer's instructions.
6. **INSPECT WIRE ROPE IN ACCORDANCE WITH MANUFACTURER'S INSTRUCTIONS. DO NOT USE WIRE ROPE THAT IS KINKED, BIRDCAGED, CORRODED, UNDERSIZED, OR DAMAGED IN ANY WAY.** Do not expose wire rope to fire, undue heat, corrosive atmosphere, electricity, chemicals or damage.
7. **WIRE ROPES USED WITH TRACTION HOISTS MUST HAVE PREPARED ENDS.** Follow hoist manufacturer's recommendations.
8. **USE THIMBLES AT ALL WIRE ROPE SUSPENSION TERMINATIONS.**
9. **USE J-BOLT WIRE ROPE CLAMPS OR SWEDGE FITTINGS. DO NOT USE U-BOLT CLAMPS.**
10. **TIGHTEN THE J-BOLT WIRE ROPE CLAMPS** in accordance with the manufacturer's instructions.

**C. POWER SUPPLY FOR MOTORIZED EQUIPMENT:**

1. **USE PROPERLY GROUNDED ELECTRICAL POWER CORDS.** Protect them with circuit breakers.
2. **USE POWER CORDS AND AIR HOSES OF THE PROPER SIZE THAT ARE LONG ENOUGH** for the application.
3. **POWER CORD AND AIR HOSE CONNECTIONS MUST BE RESTRAINED** to prevent separation.
4. **USE STRAIN RELIEF DEVICES TO ATTACH POWER CORDS AND AIR SUPPLY HOSES THE PLATFORM**, to prevent them from separation.
5. **PROTECT POWER CORDS AND AIR HOSES FROM SHARP EDGES.**
6. **USE GFCI WITH POWER TOOLS.**

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 41 of 43
---------------------	------------------------	-------------	---------------



**D. FALL ARREST EQUIPMENT:**

1. **EACH PERSON ON AN ADJUSTABLE SUSPENDED SCAFFOLD** must be attached to an independent fall arrest system.
2. **EACH VERTICAL LIFELINE SHALL BE ATTACHED IN ACCORDANCE WITH THE MANUFACTURER'S INSTRUCTIONS** to a separate anchorage capable of supporting a minimum of 5000 pounds (2267 kg) or an anchorage designed by a qualified person.
3. **DO NOT WRAP LIFELINES AROUND STRUCTURAL MEMBERS** unless lifelines are protected and a suitable anchorage connection is used.
4. **PROTECT LIFELINES AT SHARP CORNERS AND EDGES** to prevent chafing.
5. **RIG FALL ARREST SYSTEMS** to minimize free fall.
6. **INSTALL VERTICAL LIFELINES SO THEY HANG FREELY.**
7. **USE LIFELINES** that are compatible with the rope grab.
8. **INSTALL ROPE GRAB IN ACCORDANCE WITH THE MANUFACTURER'S RECOMMENDATIONS.** Rope grab must be properly oriented.
9. **KEEP ROPE GRAB POSITIONED ABOVE YOUR HEAD.**
10. **UTILIZE FULL BODY HARNESES** of the proper size and fit.
11. **UTILIZE SHOCK-ABSORBING LANYARD** attached to the D-ring at the center of your back between the shoulder blades.
12. **INSPECT FALL PROTECTION ANCHORAGE/EQUIPMENT BEFORE EACH USE.** Consult the fall protection supplier for inspection procedures.
13. **WHEN A SECONDARY WIRE ROPE SYSTEM IS USED** instead of a vertical lifeline, attach the lanyard to a horizontal lifeline or an approved platform anchor.

**E. DURING USE:**

1. **USE ALL EQUIPMENT AND ALL DEVICES** in accordance with the manufacturer's instructions.
2. **DO NOT OVERLOAD OR MODIFY EQUIPMENT.**
3. **INSPECT ALL EQUIPMENT INCLUDING HOISTS, PLATFORM, AND RIGGING** before each use.
4. **INSPECT WIRE ROPE BEFORE AND DURING USE.**
5. **USE CARE TO PREVENT DAMAGE TO EQUIPMENT.**
6. **CLEAN AND SERVICE EQUIPMENT REGULARLY.** Follow the manufacturers' recommendations.
7. **ALWAYS MAINTAIN AT LEAST (4) FOUR WRAPS OF WIRE ROPE ON DRUM TYPE HOISTS.**

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 42 of 43
---------------------	------------------------	-------------	---------------



- 8. **DO NOT CONNECT PLATFORMS** unless the installation was designed for that purpose.
- 9. **DO NOT MOVE ADJUSTABLE SUSPENDED SCAFFOLDS HORIZONTALLY** unless safe work practices are followed.
- 10. **WHEN RIGGING FOR ANOTHER DROP** assure sufficient wire rope is available before moving the suspended platform horizontally to the next location.

**F. WELDING FROM SUSPENDED SCAFFOLDS REQUIRES SPECIAL TRAINING:**

- 1. **ASSURE PLATFORM IS GROUNDED TO THE STRUCTURE** using a grounding conductor.
- 2. **INSULATE WIRE ROPE ABOVE AND BELOW THE PLATFORM.**
- 3. **INSULATE WIRE ROPE AT SUSPENSION POINT AND ASSURE WIRE ROPE DOES NOT CONTACT THE STRUCTURE ALONG ITS ENTIRE LENGTH.**
- 4. **PREVENT THE WIRE ROPE END FROM BECOMING GROUNDED.**
- 5. **INSULATE EACH HOIST WITH A PROTECTIVE COVER.**
- 6. **INSULATE TIE BACK WIRE ROPES AT THE CONNECTION POINTS.**

Since field conditions vary and are beyond the control of the SSFI and the SAIA, safe and proper use of adjustable suspended scaffolding is the sole responsibility of the user.

© Scaffolding, Shoring & Forming Institute, 1300 Sumner Ave., Cleveland, Ohio 44115;  
 © Scaffold and Access Industry Association, 400 Admiral Blvd., Kansas City, MO 64106,  
 (P) 816 595-4860; (F) 816 472-7765. [www.scaffold.org](http://www.scaffold.org)

This document is the property of the SSFI and the SAIA.  
 Permission for reprinting this document is granted in the interest of safety.

Reprinting of this publication does not imply approval of product by or indicate membership in the Association.

Document No: 710063	Issue Date: 3-Oct-2014	Revision: B	Page 43 of 43
---------------------	------------------------	-------------	---------------